


INSTRUCTIONS

Washing machine TM 8055/TM 8060/TM 9060/TM 9070

Wash

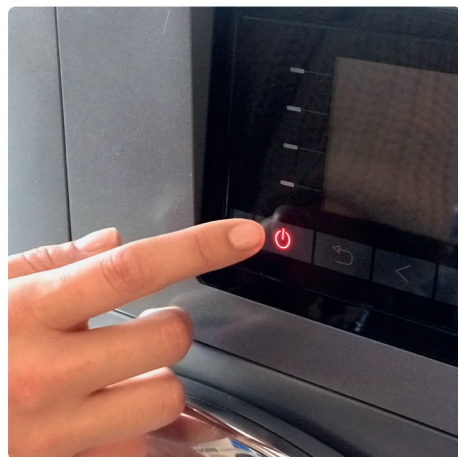

1. Start the display

Press the On/Off button to start the display.



2. Open the door

Press the key symbol to open the door.



3. Load

Load the washing machine.



4. Close

Close the door.




5. Add detergent

Add detergent for main wash in the left compartment. Fabric softener in the middle compartment.



6. Select program

Select program and the desired program options by pressing the light bar next to the program name.

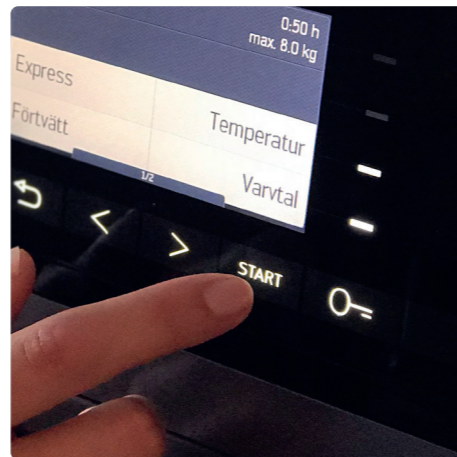

7. Start

Press the start button.



8. Unload

When the wash cycle is finished, unload the laundry.

Extra



Stop in advance

Press the light bar next to 'Cancel' and hold until 'End' is displayed.



Prewash

If prewash is selected, add detergent in the right compartment.